


MIO SPACE

USER MANUAL

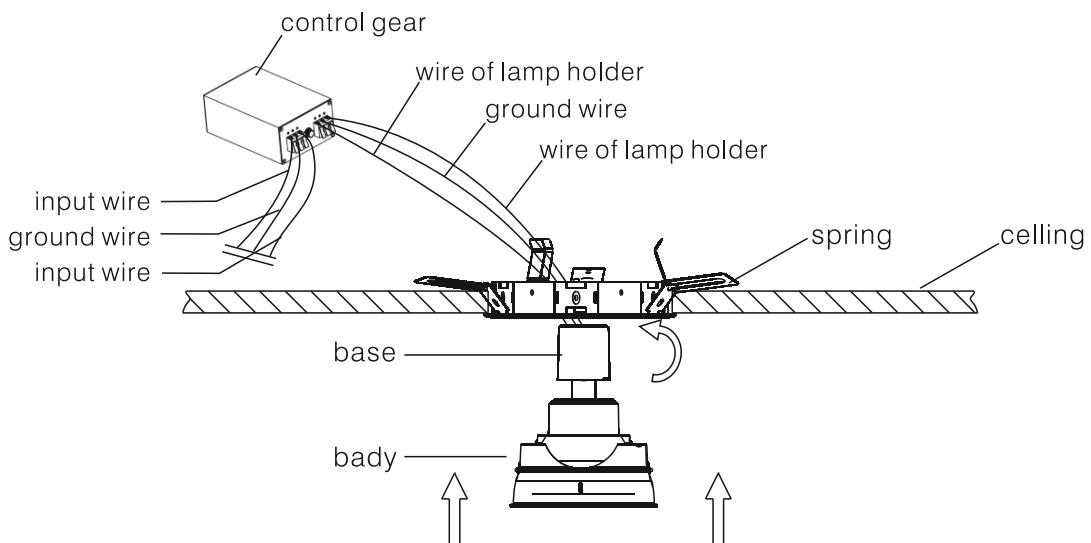

1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.


Notice:

1. This fixture works with control gear under condition of 230V AC/50Hz power input and rated power lamp.
2. Ensure a distance of 75mm away from the fixture for the sake of air ventilation and their use should obey all fire regulations. The distance between the fixture and the lighted object must be 0.8m at least.
3. Don't install this fixture on the damageable or ductile ceiling board!
4. Don't touch the lamp when in use.
5. Don't be covered by adiabatic material at any time.
6. Always switch off the mains supply. 5-10 minutes later to replace the lamp after the used lamp has cooled down.
7. Lamps should only be used in a protective shield!

If you have any other questions about this manual, please refer to qualified engineer.

Instruction:

1. To cut a hole with out cut size of 150MM and to connect the power to the control gear and output terminal block with the fixture. After that to install the fixture into the hole. (Pic.1)
2. When to replace the lamp, please turn off the power first, and don't touch the lamp unless wear the safe gloves or wait till 5 minutes later when the lamp has cooled down. To put the middle ring into one side and take out the front ring to replace the new lamp from bottom of the lamp and return the front ring back.
3. To turn on the power to use.