


TEXUS SPORT USER MANUAL

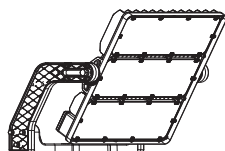


1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.


Installation Instructions




1000W/1200W

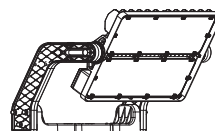

600W/800W

 




Driver Box
(external application)

 


Driver Box
(internal application)





Physical Dimensions

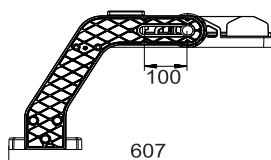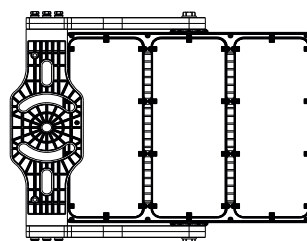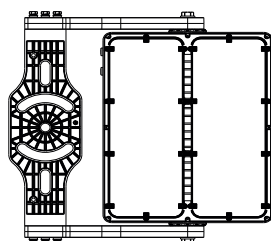

600W/800W

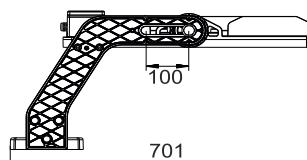

1000W/1200W

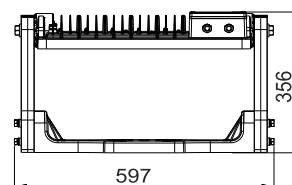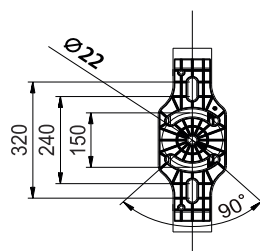


600W/800W/1000W/1200W


Wiring Diagram

*This wiring diagram applies to two types of junction boxes


Non-dimmable wiring

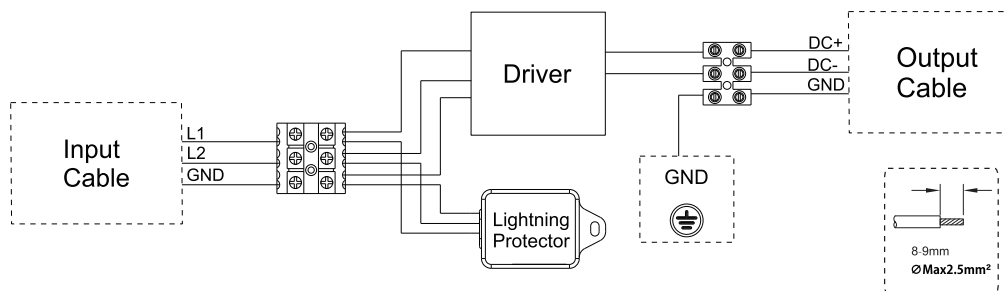


DALI wiring

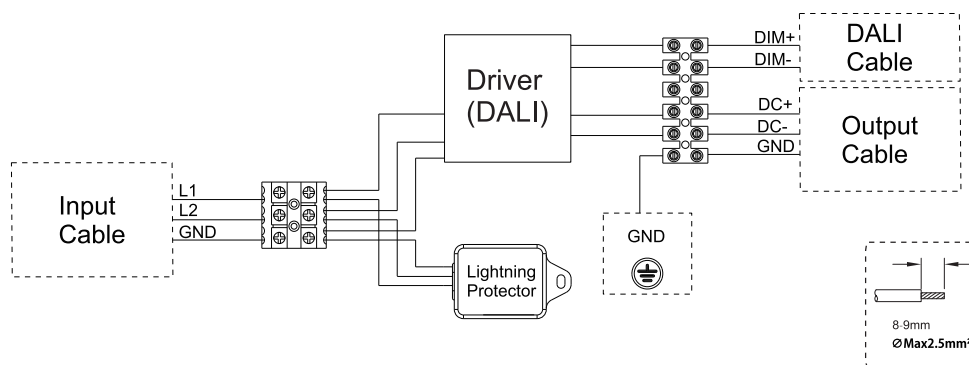

DMX wiring


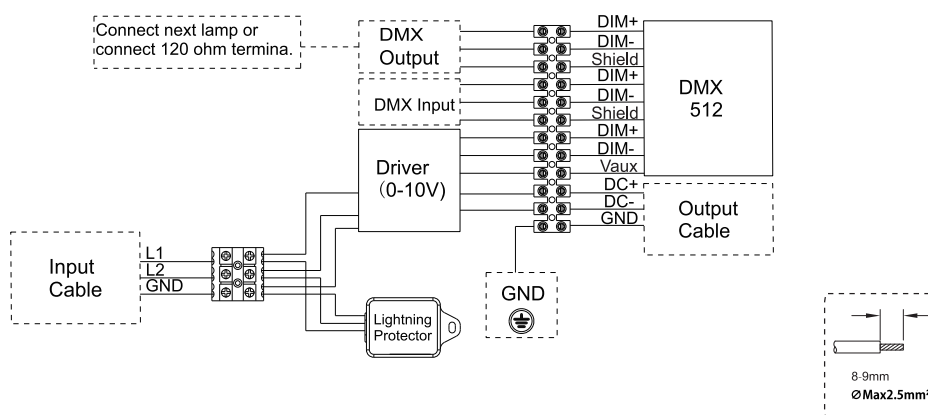


Junction Box Wiring


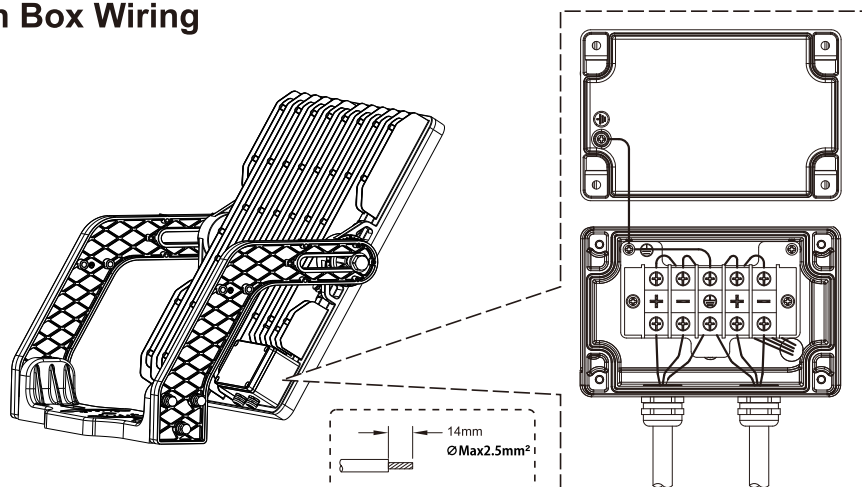


Driver Box

  
Driver Box(external application)




Driver Box(internal application)

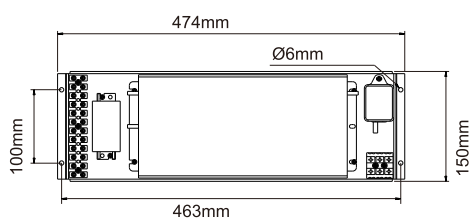 


Non-dimmable wiring

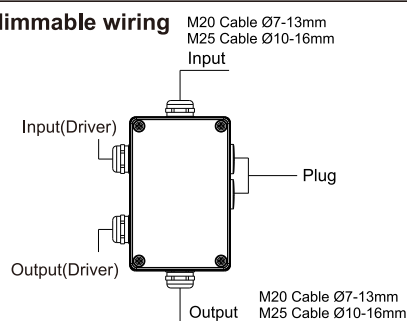


DALI wiring

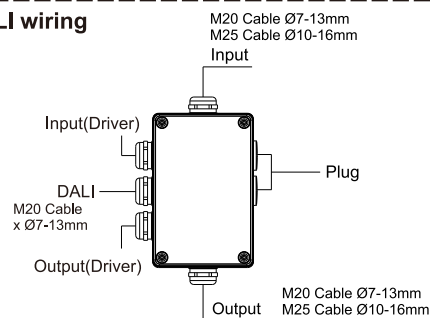


DMX wiring

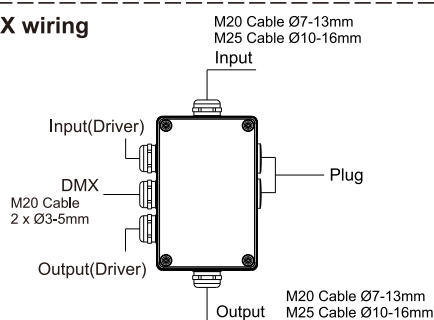


Bracket Installation

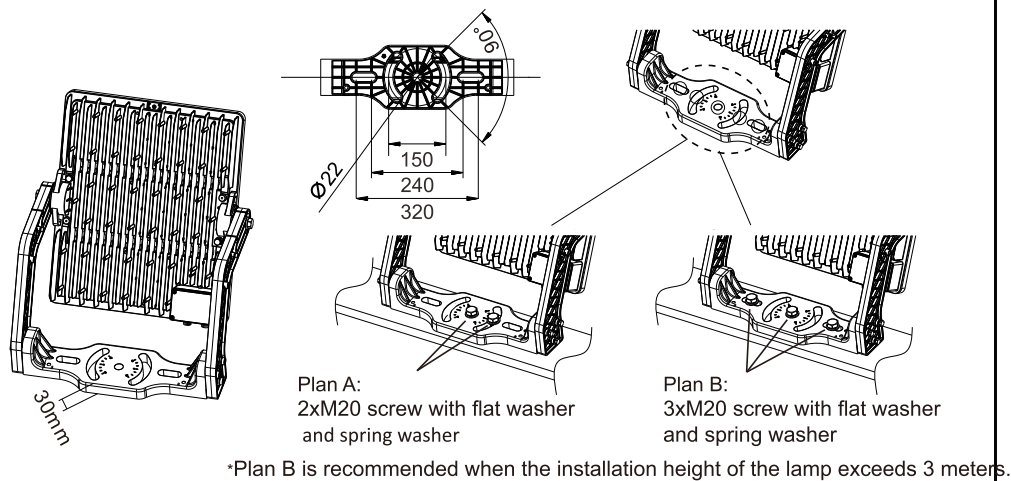

Bracket Installation

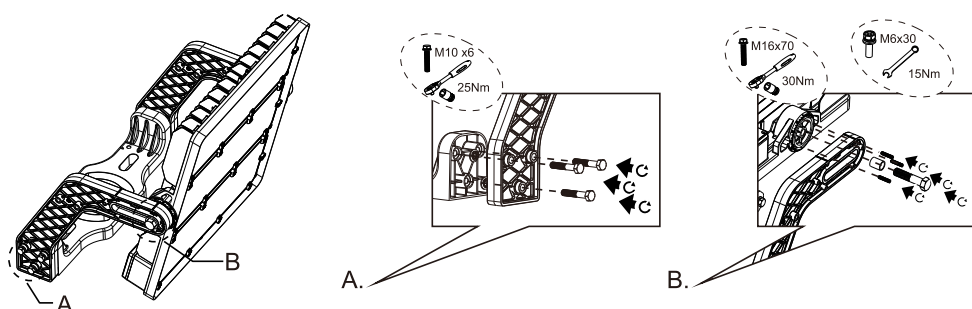

Safety Rope Installation

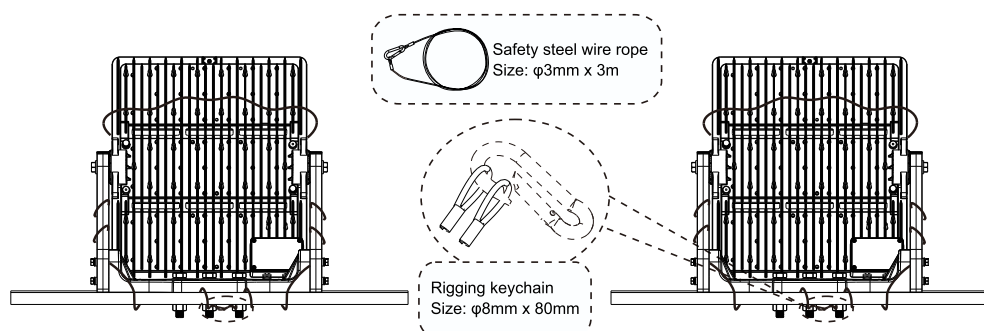

Rotatable Angle


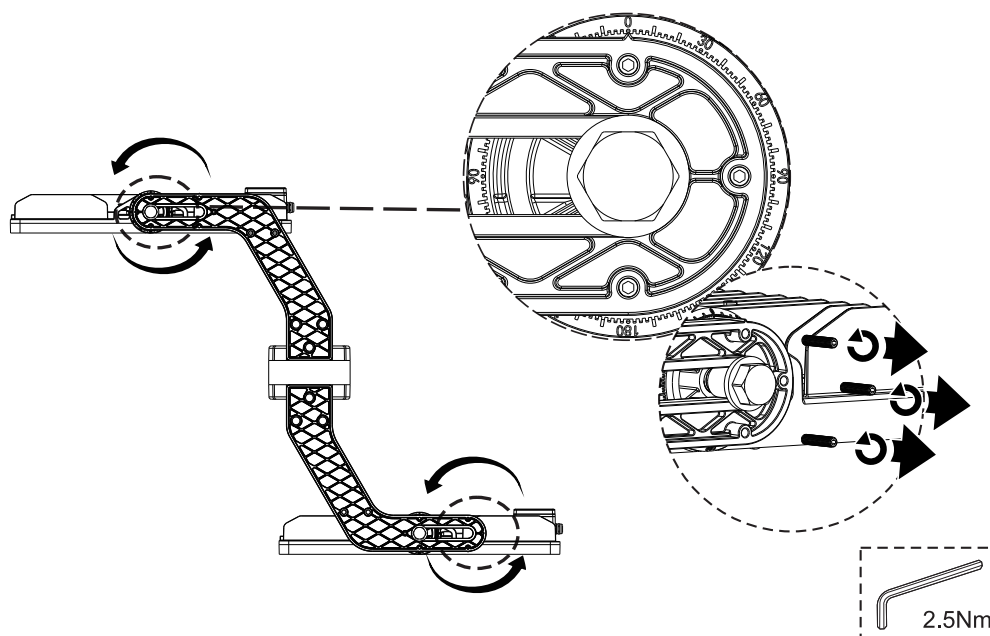



Table 3

	Lamp body angle	0°	15°	30°	40°	50°	65°	90°
EPA Unit: M ² /ft ²	800W/600W	0.091/0.98	0.141/1.52	0.197/2.12	0.230/2.47	0.256/2.75	0.285/3.06	0.298/3.2
	1200W/1000W	0.091/0.98	0.165/1.77	0.244/2.62	0.261/2.81	0.329/3.54	0.371/3.99	0.392/4.22

Positions Not Recommended

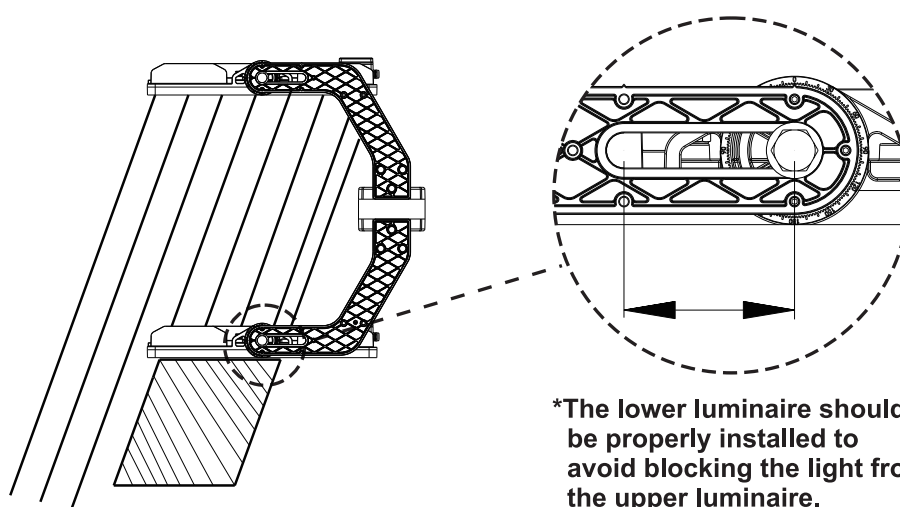


Driver Box(external application)

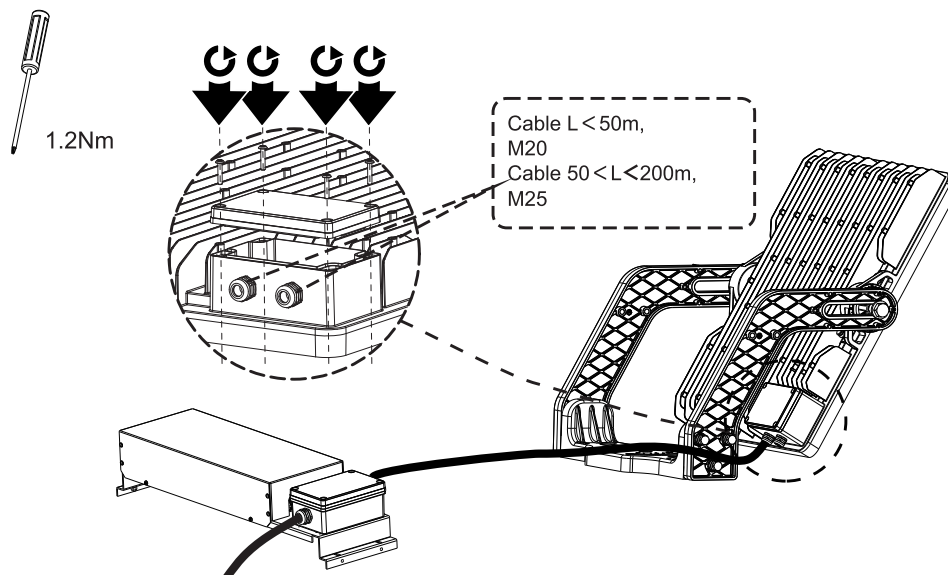


! Do not open the driver box if it is energized, only qualified electricians can operate.

Driver Box(internal application)

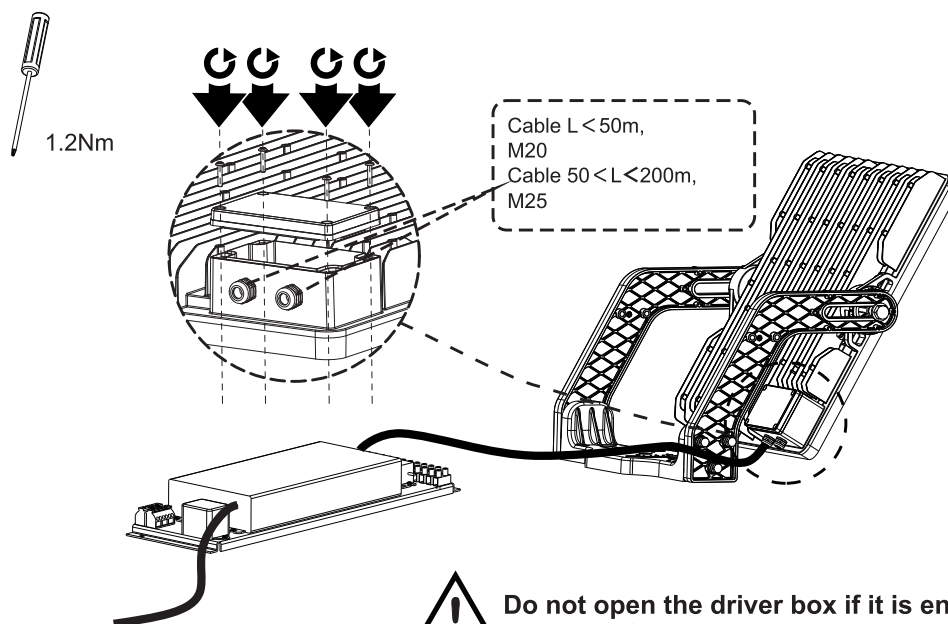


! Do not open the driver box if it is energized, only qualified electricians can operate.


Driver Box(internal application)

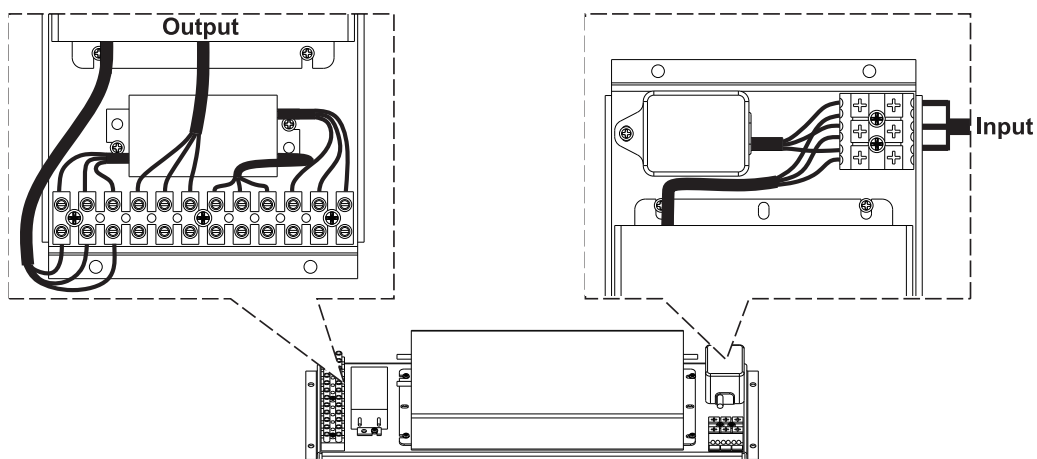

1. ✂

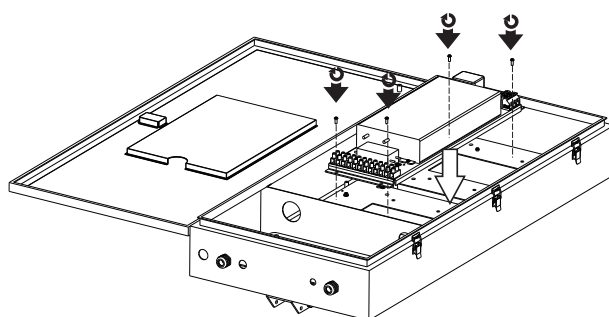


2. ✂

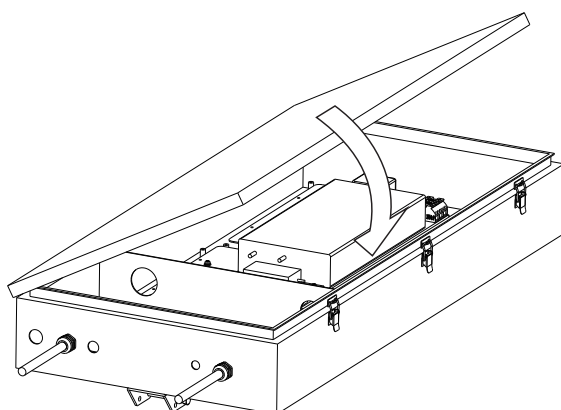


*This gearbox is for reference only.

Aiming Device Installation

(Laser sight and bracket need to be purchased separately)

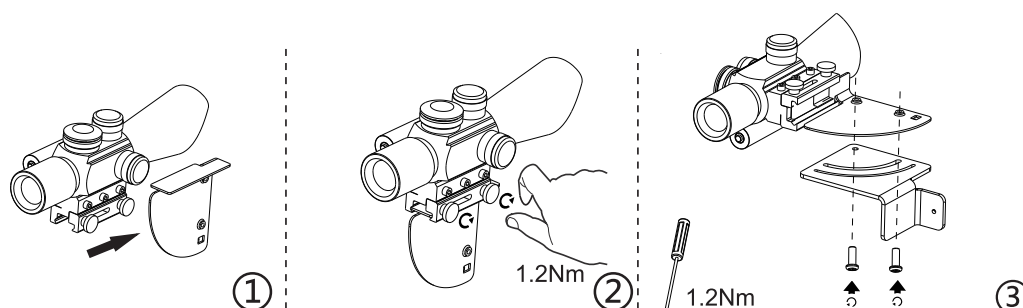


Horizontal Installation

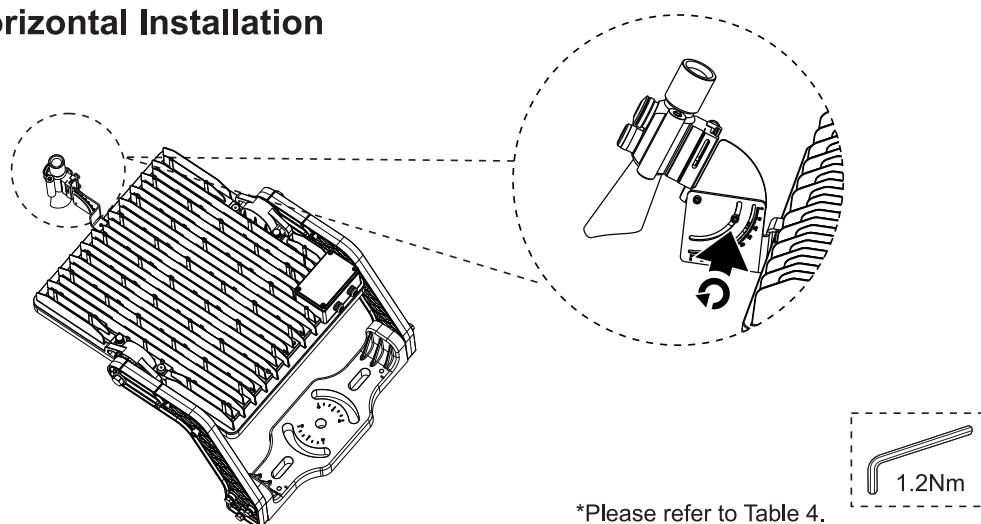


*Please refer to Table 4.

Vertical Installation

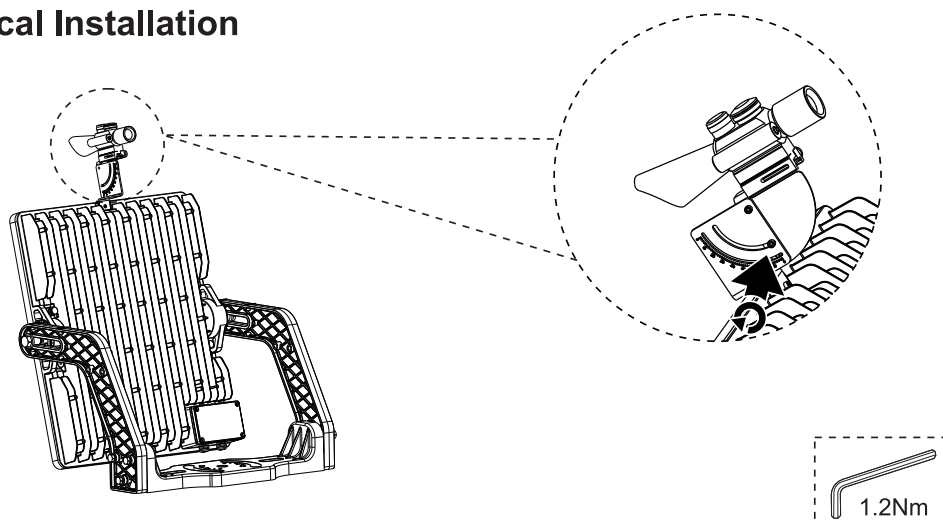


*Please refer to Table 4.

Driver Box

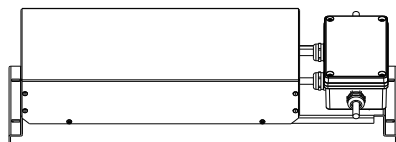


Driver Box
(external application)

 


Driver Box
(internal application)

Driver Box Installation


Driver Box(external application)

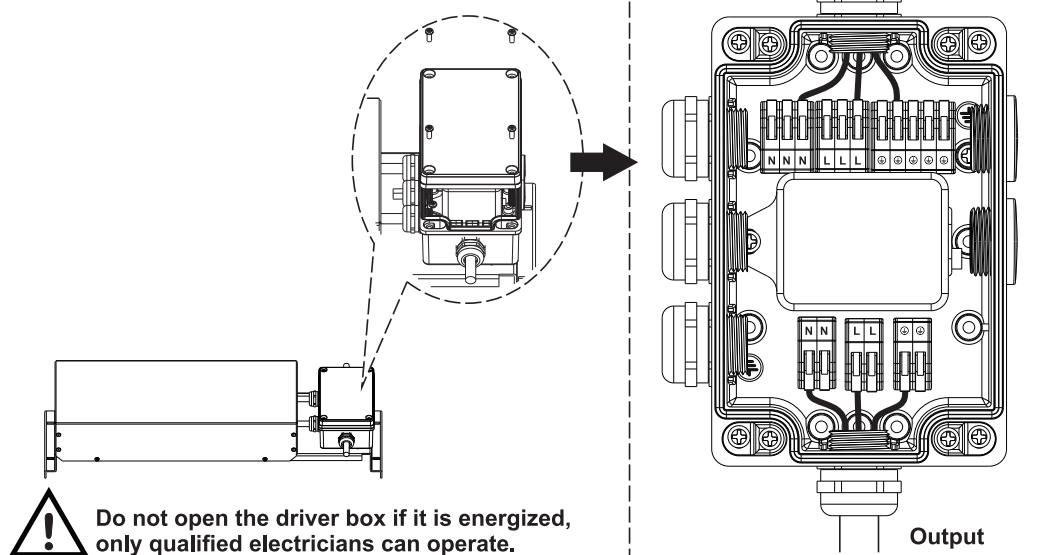

1. ✕

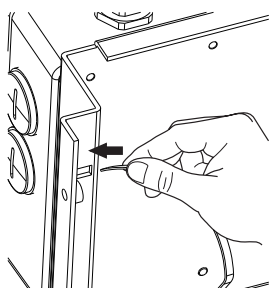

2. ✕

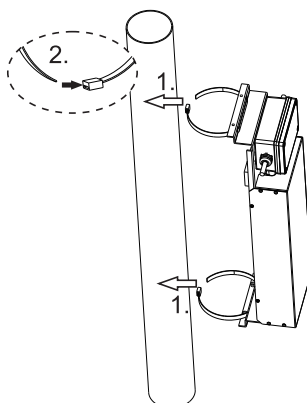

3. ✕

