
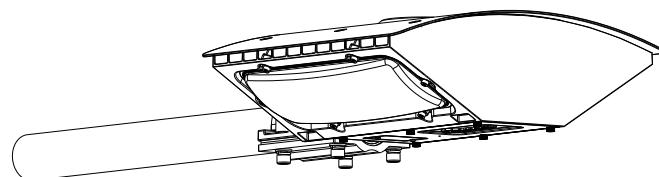
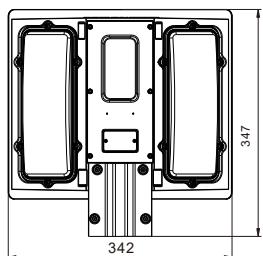
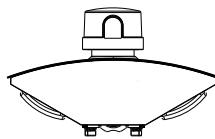
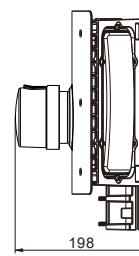
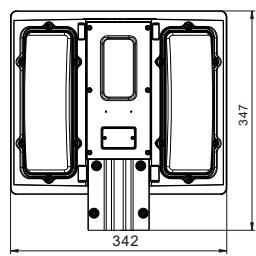


TULED PROM



User manual

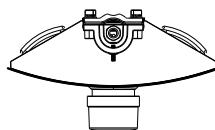

1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. No supplied water-proof box, installation should be advised by qualified professional.
3. The external flexible cable can not be replaced. If the cable is damaged, the luminaire should be discarded.

Installation Instructions**Physical Dimensions****Photocell control**



Photocell

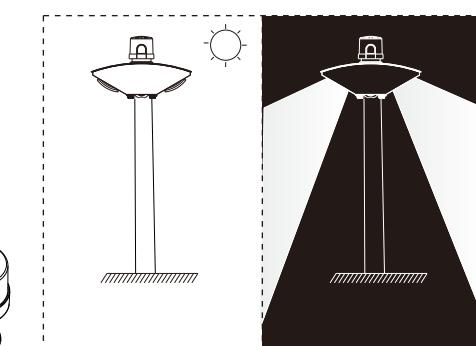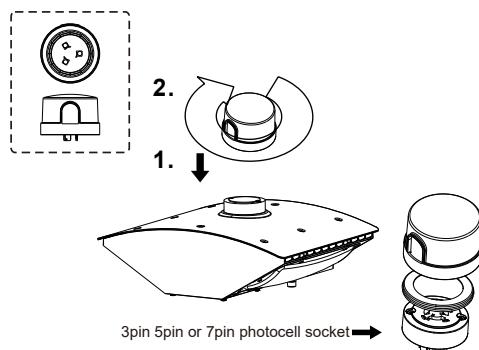



Note: If the luminaire use 5 pin or 7 pin photocell socket, it need to plus a waterproof gasket between socket and photocell controller.

Rated Voltage	120-277VAC	Turn-Off Level / Time-Delay	60Lx / 2~15s
Applicable Voltage Range	105-305VAC	Ambient Temp.	-40°C~+70°C
Rated Frequency	50/60Hz	Related Humidity	99%
Rated Loading	1000W Tungsten, 1800VA Ballast	Service Life	5000 times
Power Consumption	1.0VA	Overall Size	84(Dia.) x 66mm
Turn-On Level / Time-Delay	10Lx / 15~120s	Weight Approx.	88g

1.

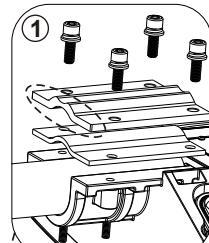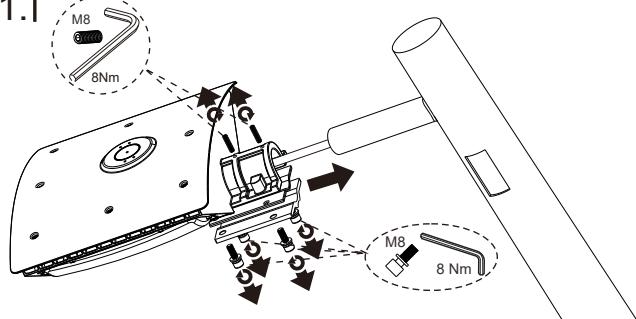

2.

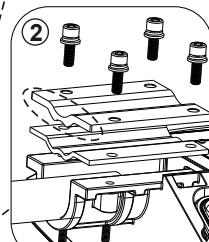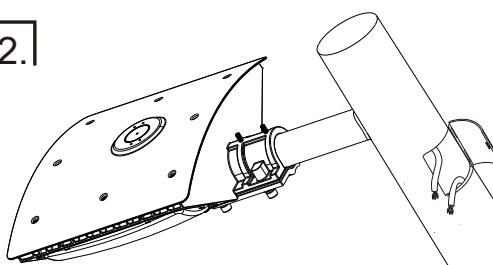

Connect wires as requested

Notice
 1. Installation method①
 apply to φ40mm and φ44mm mounting pole
 2. Installation method②
 apply to φ32mm and φ34mm mounting pole
 *Please pay attention to the orientation of the fixing plate

2

Page 2